☆ Important information

Care instructions:

- Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat source.
- Do not expose the unit to moisture or water.

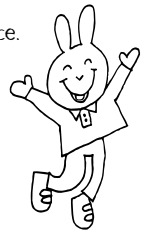

This product complies with the ASTM F963

STATEMENT of FCC COMPLIANCE

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.

FCC LABEL COMPLIANCE STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
1) this device may not cause harmful interference, and
2) this device must accept any interference received, including interference that may cause undesired operation.



Kidz delight Ltd
1121 Warren Avenue, Suite 245
Downers Grove, IL. 60515 USA
Customer service: (800) 777 8670
Toll-free number for the USA and Canada only
www.kidzdelight.com
All rights reserved
© Kidz Delight Ltd.

www.kidzdelight.com

www.cidetoys.com
© 2011 - CIDE toys
Kidz Delight and Kidz Delight logo are registered trademarks of CIDE
© 2011 Marc Brown.
All Rights Reserved.
© 2011 - Arthur

www.cidetoys.com

We back our products: We maintain the highest quality standards. We back our products with a 90-day warranty and our Toll Free Customer Service Number. You can be assured you are purchasing quality with Kidz Delight.

V00
May 2012
Printed in China
Made in China

Waste electrical products and batteries should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority for recycling advice.

Instruction Manual

ARTHUR'S FUN PHONICS

3+

☆ The unit

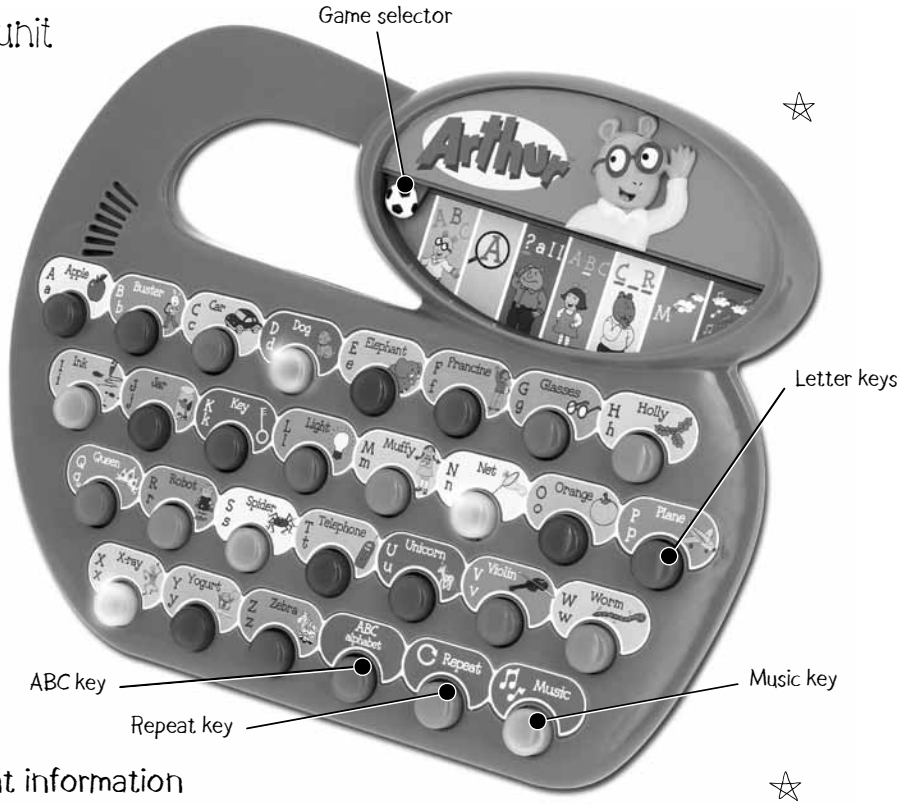

Important information

- This toy is suitable for children aged 3 years & over.
- Please retain this manual for further reference.
- WARNING: All packing materials such as internal bags, plastic collars, plastic films, carton inserts are not part of this product and should be discarded for your child's safety.
- IMPORTANT: for additional safety, check toys regularly for signs of damage during use.

☆ Contents

- Unit
- User Manual

Letter Keys: Use these keys to play or answer the questions.

ABC Key: Pressing this key at any time, in any game, unit will interrupt the game and recite the ABC's as keys light up.

Music key: Pressing this key at any time, in any game, will cause the unit to interrupt the game and play a tune while keys light up.

☆ How to play

Select one of the 7 games by moving the game selector.

Game 1 Game 2 Game 3 Game 4 Game 5 Game 6 Game 7

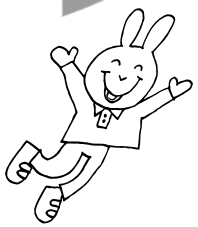

Game 1: Discovery -Word

Press a letter to hear its corresponding word and some fun SFXs.

Game 2: Discovery - Letter names & sounds

Press a letter to hear its name and sound (phonics).

Game 3: Find the first letter

Arthur will ask to find the first letter of a given word ("Find the first letter of the word Apple").
If you make a mistake, Arthur gives you a hint by lighting some keys, the right answer can be found within these keys.
If after 3 attempts you have not found the correct letter, Arthur will light up the correct answer and say "Here it is!"

Game 4: Find the letter

Arthur will ask to find the letter of a word with it's phonics sound ("Find the letter that says" [a] as in Apple").
If you make a mistake, Arthur gives you a hint by lighting some keys, the right answer can be found within these keys.
If after 3 attempts you have not found the correct letter, Arthur will light up the correct answer and say "Here it is!"

Game 5: Spelling

Arthur will ask you to spell a word. If you make one mistake for a given letter, Arthur will tell you which letter to press. Each time you press a correct letter, the corresponding key will light up and if it is not the last letter of the word, Arthur will say "Keep going".
If you make 3 mistakes for a given letter, Arthur will tell you how the word is spelled and the letter will light up as he says them.
If you spell the word correctly Arthur will re-spell it for you and congratulate you!

Game 6: Follow Arthur!

Arthur will play a sequence of phonics while lighting up the corresponding keys.
Will you be able to reproduce the sequence in the correct order? Take care you have only one chance per key!

Game 7: Music Time!

Press any key to hear a tune!

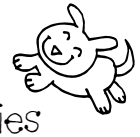

☆ How to change batteries

1. This product requires 3 x 1,5V-AA-LR6-AM3 batteries
2. When required, using a suitable screwdriver, undo and remove the battery cover located under the unit.
3. Insert 3 x 1,5V-AA-LR6-AM3 batteries into the compartment ensuring they are installed the correct way around.
4. The polarities are marked inside the battery compartment.
5. Should the batteries have no polarity markings, the flat end of the battery should always be inserted against the spring.
6. Reassemble the battery cover and tighten the screw to secure.
7. Do not over tighten.

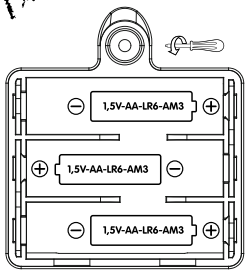

Please note the important points below when using batteries to power this product:

- Batteries should be inserted and removed by an adult.
- Only use the type of batteries specified in this user manual, or equivalent type. We recommend the use of alkaline batteries.
- Follow the polarity diagram inside the battery compartment and the polarity markings on the batteries.
- An incorrect location may either damage the toy, or cause battery leakage, or, to an extreme degree, lead to battery explosion.
- Do not try to charge non-rechargeable batteries, as they may leak or explode.
- Replace all batteries at the same time.
- Do not mix new with old batteries.
- Do not mix different types of batteries (i. e. alkaline and zinc carbon).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the product. Battery leakage and corrosion can damage the product.
- Do not short-circuit the supply terminals. Store batteries away from metal objects.
- Do not dispose of batteries in fire, as they may leak or explode. Never disassemble batteries.
- Rechargeable batteries should not be used.
- When rechargeable batteries are used anyway :
    - Rechargeable batteries shall be charged only under the supervision of an adult.
    - Rechargeable batteries shall be removed from the toy before being charged (if they can be removed).
- If a battery is swallowed, consult a Doctor or Medical Facility. Don't forget to take the product with you.
- If battery leakage occurs and comes in contact with the skin or eyes, wash immediately with lots of water.
- Batteries are included for demonstration purposes only and may need replacing after purchase.
- Strong Electro Magnetic Interference may disturb the normal function of the product. If so, simply reset the product to resume normal operation by following the instruction manual. In case the function does not resume, please use the product in another location.

☆ Trouble shooting

If the unit doesn't operate...	Check that the batteries are installed correctly. or Install new batteries.
If the volume is too low...	Install new batteries.
If the voice/music begins playing at a very high or low rate of speed...	Install new batteries.
If there is a continuous buzzing sound and the unit doesn't operate...	Install new batteries.
If the light of the keys becomes dim...	Install new batteries.
If the unit malfunctions...	Install new batteries.